

FLOW-SYNC™

Application: **Commercial**
Sensor: **Flow**

FEATURES

- Simple two-wire connection to ACC and I-Core controllers (up to 300 m)
- Feeds flow data (gallons or liters) to controller, for flow recording and monitoring purposes
- Robust waterproof construction (used with appropriate FCT tees for pipe diameter, see table)
- Provides station level flow monitoring for reaction to high or low flow conditions
- Helps prevent damage and waste from leaks and breaks in piping system



Impeller-type flow meter, requires FCT for pipe installation (sold separately)

OPERATING SPECIFICATIONS

| Temperature | Pressure | Humidity |
|-------------|----------------|------------|
| 0 to 60°C | up to 13.7 bar | up to 100% |

BSP ADAPTERS FOR FCT FITTINGS

| Diameter (mm) | Model |
|---------------|--------|
| 25 mm | 795700 |
| 40 mm | 795800 |
| 50 mm | 241400 |
| 80 mm | 477800 |

FLOW RANGE

| Flow-Sync Sensor Diameter | Operating Range (GPM) | |
|---------------------------|-----------------------|---------------------|
| | Minimum** | Suggested Maximum** |
| 25 mm | 2 | 17 |
| 40 mm | 5 | 35 |
| 50 mm | 10 | 55 |
| 80 mm | 28 | 120 |
| 100 mm | 34 | 195 |

Notes:

* Good design practice dictates the maximum flow not to exceed 1.5 m/sec. Suggested maximum flow is based upon Class 200 IPS plastic pipe

FLOW-SYNC

| Model | Description |
|-------|---|
| HFS* | Flow-Sync sensor, use with ACC and I-Core controllers, sensor requires FCT for pipe installation. |

USER INSTALLED OPTION (Specify Separately)

| Model | Description |
|---------|--|
| FCT-100 | 25 mm Schedule 40 sensor receptacle tee |
| FCT-150 | 40 mm Schedule 40 sensor receptacle tee |
| FCT-158 | 40 mm Schedule 80 sensor receptacle tee |
| FCT-200 | 50 mm Schedule 40 sensor receptacle tee |
| FCT-208 | 50 mm Schedule 80 sensor receptacle tee |
| FCT-300 | 80 mm Schedule 40 sensor receptacle tee |
| FCT-308 | 80 mm Schedule 80 sensor receptacle tee |
| FCT-400 | 100 mm Schedule 40 sensor receptacle tee |

Notes:

* Flow-Sync (sensor only) for use with ACC and I-Core controllers. Requires FCT for pipe installation (sold separately)